




## Addendum for the KiWi™880

### Installation instructions for the KiWi™ 880

- 1) Place the camera mounting shoe into the long horizontal slot on the camera mounting side of the camera bracket as shown in Fig. 1 and slide it towards the end of the slot that has the threaded hole.
- 2) Install the Captive Camera Knob back into the bracket by screwing it into the threaded hole at the end of the long horizontal slot then through the hole in the camera mounting shoe.
- 3) Mount the Coolpix 880 camera on your bracket by screwing the Captive Camera Knob into the tripod mounting hole of the camera until it is tight. The camera should be mounted as shown in Fig. 2.
- 4) Loosen the Captive Camera Knob so you can slide the Camera Mounting Shoe and camera to line up the left edge of the Camera Mounting Shoe (visible through the long horizontal slot) with the corresponding lens indicator line on the label below the slot.


For example, if you are using the Nikon WC-E63 24mm Wide Angle Lens, line up the left edge of the Camera Mounting shoe, that is visible through the slot, with the short vertical line to the left of the WC-E63 printed on the label and then tighten Captive Camera Knob.(See Fig. 3) Other lenses, such as the standard and fisheye, the Camera Mounting Shoe would be lined up to the corresponding indicator line using the same method.

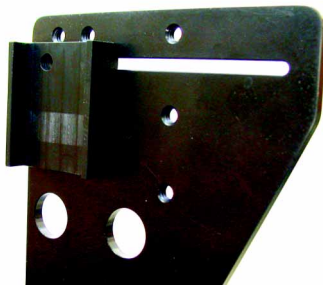

**Fig. 1**



**Fig. 2**

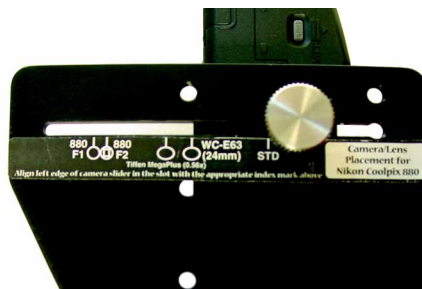

**Fig. 3**